



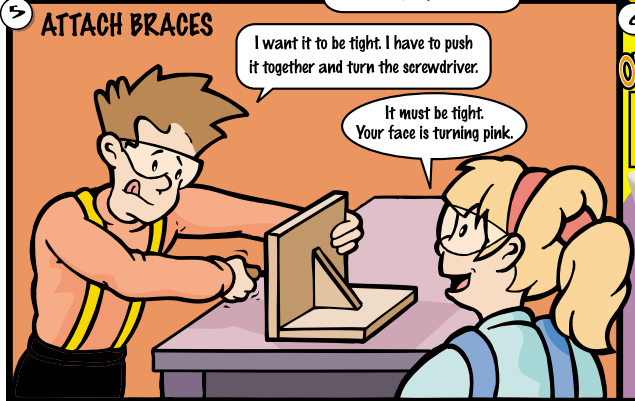

WORKING WITH WOODY

BOOKENDS

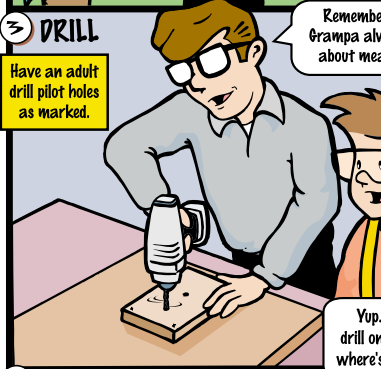

- 1. WHAT YOU'LL NEED:**
- 1" x 6" x 36" board
 - 10-#6 x 1 1/4" screws
 - a drill
 - a saw
 - pencil
 - a screwdriver
 - sandpaper
 - a square
 - non-skid pads
 - (optional) 2-2"x5" mending panels

